

Tone Selection

Alternates each time the button is pressed.

Red	Concert Grand Piano
Green	Ballad Piano
Blue	Bright Piano
Pink	Upright Piano
Light Blue	Harpichord
Yellow	Electric Piano



Volume



Tone



Play/Stop



Speaker ON



Playing a song

Bluetooth

[Bluetooth] button + power ON
Registering a mobile device (Bluetooth audio pairing)



* On models not equipped with Bluetooth, this button is labeled "Metronome."

Speaker on/off (only when headphones are connected)



Song Settings

Selecting a Song

There are 30 internal songs.
If a USB flash drive is connected, you can select up to 50 songs from the USB flash drive.

Song Volume

SMF Play Mode

All Songs Play Mode

Bluetooth Settings

Bluetooth Setting Page-Turning
MODE 1: Cursor [▲][▼]
MODE 2: [Page Up] [Page Down]

* Only on models equipped with Bluetooth

Metronome Settings

Number of Beats

Tempo

Specifying a Numeric Tempo

Common Tempo Settings

Metronome On/Off

Other Settings

Transpose

Ambience

Brilliance

Key Touch

Master Tuning

Auto Off

Saving the Settings

The ★ settings can be saved so that they will be remembered even after the power is off.



Restoring the Factory Settings

