

# Assembling the KF-10





- \* To ensure that you assemble this unit correctly, please read this manual carefully before you begin assembly. Keep this manual nearby for reference when needed.
- \* Keep this unit horizontal when lifting it during assembly or transport.
- \* Be careful not to pinch your hands or drop this unit on your foot during assembly or transport.
- \* You must obtain the assistance of at least one additional person when assembling or transporting this unit.
- \* Keep small parts such as screws and cord clamps out of the reach of small children to ensure that these items are not swallowed accidentally.
- \* The screwdriver needed for assembly is not included. You will need to provide a Phillips screwdriver of the appropriate size for the screws.
- \* You should initially tighten each screw loosely before tightening them to their final position. Start by tightening the screws until they are approximately half hidden. Do not use a power screwdriver when tightening the screws to their final position. Doing so may strip the threads.
- \* Tighten the screws firmly, and place the unit at a location that is level and sure to remain stable. Never place the unit on a shag carpet. If you do so, the pedal may be unstable, causing damage.
- \* Do not place the piano main unit directly on the floor. Doing so will damage the jacks and holders on the bottom of the piano, and also damage the -bottom panel case.
- \* The wooden portions of this instrument feature a traditional finish that can be damaged. Take care not to allow it to be bumped or abraded.

## About natural marks

The wooden parts of this instrument are finished in a way that maximizes the natural character of the wood and its sense of quality. For this reason, the color and woodgrain (natural marks) of your unit will differ from other units of the same model. This is an indication that natural wood is used, and is not a problem with the quality.

Copyright © 2015 ROLAND CORPORATION


## Check the Parts

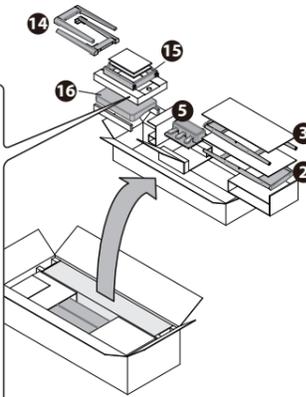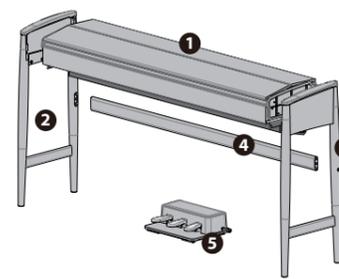


- 1 Piano main unit
- 2 Side leg assembly L
- 3 Side leg assembly R
- 4 Center board
- 5 Pedal unit
- 6 Screws (6 x 70 mm): 2 pcs.
- 7 Screws (5 x 20 mm): 6 pcs.
- 8 Hex socket head cap bolts (6 x 40 mm): 14 pcs.
- 9 Screws (4 x 16 mm): 2 pcs.
- 10 Cross dowel: 2 pcs.
- 11 Headphone hook: 1 pcs.
- 12 Hexagon wrench
- 13 Felt: 6 pcs.
- 14 (Bench) Seat leg assembly: 2 pcs.
- 15 (Bench) Flame
- 16 (Bench) Seat

## Assembling the KF-10


1. Remove the box containing the accessories, remove the packing material from both sides, and then remove the main unit.

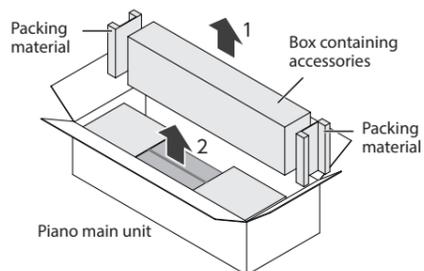


2. Open the packaging of the main unit, and place the two pieces of packing material that you removed in step 1 in front of the main unit. Pull the center board out toward yourself through the cutouts in the packing material.

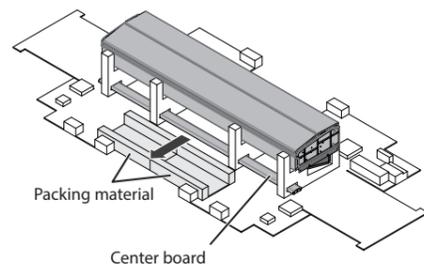

3. Place the main unit upright between the pads of the packing material that you placed in step 2, and spread out the protective mat in which the main unit was wrapped.



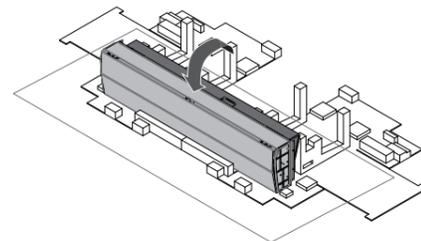


4. Open the box containing the accessories, and remove side leg assemblies L and R.

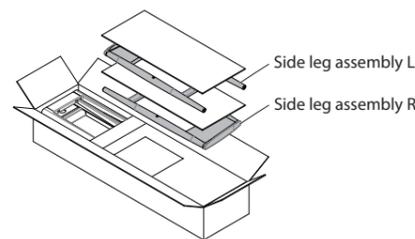


5. Use screws (5 x 20) to provisionally fasten side leg assembly L at three locations. Attach the center board to side leg assembly L, and use a screw (6 x 70) and a cross dowel to fasten them.

\* If you need to support the center board, use the pedal's packing material.

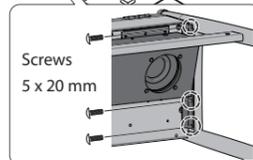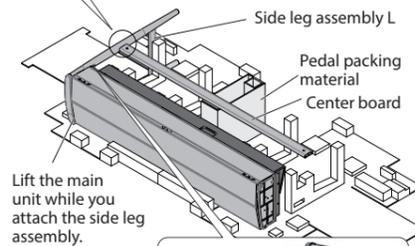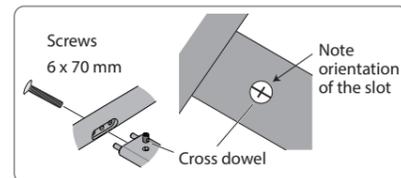


6. Use screws (5 x 20) to provisionally fasten side leg assembly R to the main unit at three locations, and use a screw (6 x 70) and a cross dowel to fasten the center board.

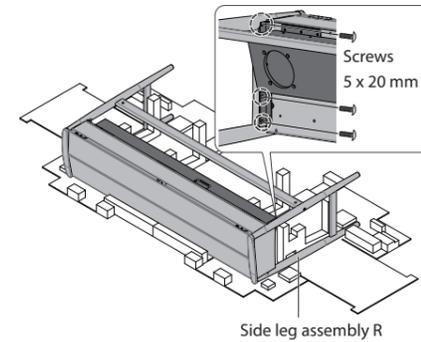

7. Place the main unit upright, and finish tightening the screws that you tightened provisionally in steps 5 and 6; first tighten the screws of the side leg assemblies and then the screws of the center board (eight locations).


\* Ensure that there are no gaps between the side leg assemblies and the main unit.

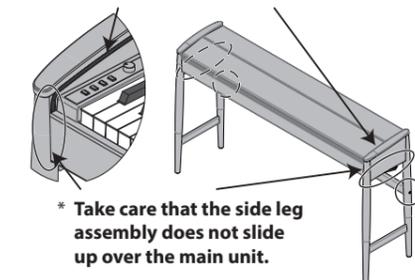


\* Take care that the side leg assembly does not slide up over the main unit.

\* After you have provisionally assembled the unit, be sure to finish tightening the screws securely.

8. Use screws (4 x 16) to fasten the headphone hook.

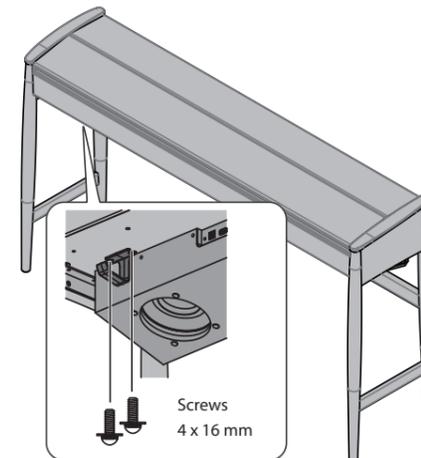


9. Connect the AC adapter to the DC In jack located on the rear panel of the piano, and connect the pedal cord to the Pedal jack. Use the coated clips to secure the pedal cord and AC adapter cord (three locations).

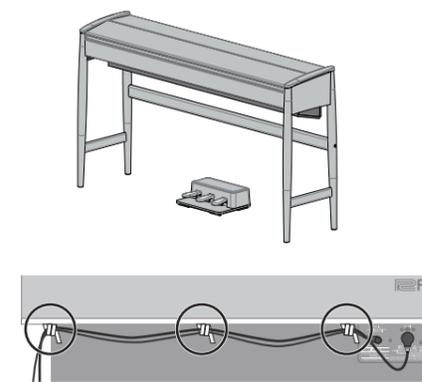


## Assembling the Dedicated Bench


1. From the box containing the accessories, remove the bench seat leg assemblies (2 pcs.) and the frame.

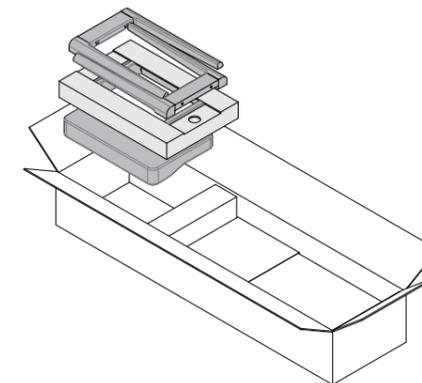


2. Use the dowels to connect the frame to the seat leg assemblies, and use eight hex socket head cap bolts (6 x 40) to provisionally fasten them.

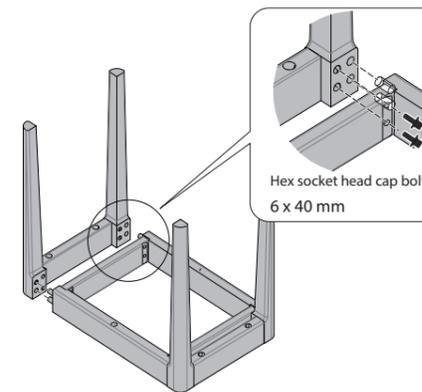

3. Use six hex socket head cap bolts (6 x 40) to fasten the seat to the parts that you assembled in step 2.

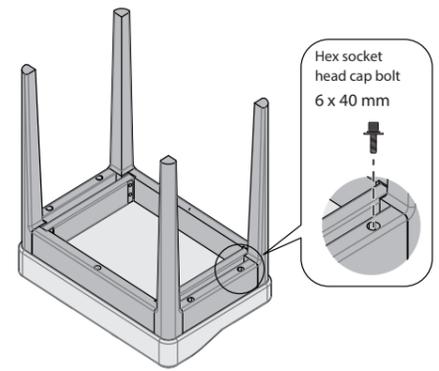


4. Stand the bench upright, and securely tighten all of the bolts.

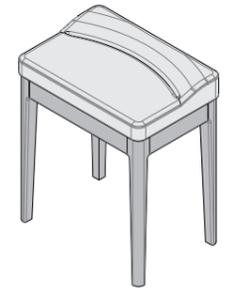

If the bench wobbles, affix the included felt pads to the bottom of the legs.

\* Don't affix the felt pads if you're using the bench on carpet.

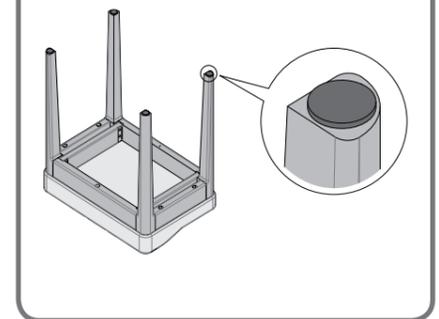

## When moving the unit

If you need to move the unit, close the keyboard cover and disconnect the AC adaptor and the pedal unit. With at least one other person helping you, lift the unit horizontally and carry it, taking care not to pinch your hands or drop the unit on your feet.